

DMX Channel Index

WildBar 8

Document revision: 20261020-01

Fixture software version 0.4.1

GLP German Light Products

Document revisions

Revision number	Notes	Date released
20261020-01 (Rev A)		November 2026

GLP WildBar 8 DMX Channel Index

© 2026 German Light Products GmbH. All rights reserved.

The marks ‘GLP’ and ‘German Light Products’ are trademarks registered as the property of German Light Products GmbH in Germany, in the United States of America and in other countries.

The information contained in this document is subject to change without notice. German Light Products GmbH and all affiliated companies disclaim liability for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss occasioned by the use of, inability to use or reliance on the information contained in this document.

Manufacturer’s head office

GLP German Light Products GmbH, Industriestrasse 2, 76307 Karlsbad, Germany
Tel (Germany): +49 7248 92719-0

Service & Support EMEA

GLP, Industriestrasse 2, 76307 Karlsbad, Germany
Tel: +49 7248 9271955 | support@glp.de | www.glp.de

Service & Support USA

GLP USA
Tel: +1 818 767 8899 | info@germanlightproducts.com
www.germanlightproducts.com

Service & Support UK Ltd.

GLP UK
Tel: +44 1392 690140 | uk@glp.de
www.glp.de

Table of Contents

1 Pixel layout **4**

2 DMX control modes overview **5**

Channel overview 6

3 DMX control channel layout **9**

Tilt 9

Intensity 9

Shutter 9

Zoom 10

Control/Setting 10

CTC (Color Temperature Control) 12

Tungsten (Tungsten simulation channel) 12

Main Color Control 13

Pattern / Pixel Color Control 14

Mix Priority 14

Pattern Select 15


Pattern Step/Speed 18

Pattern X-fade 20

Pattern Transition 20

1. Pixel layout

The WildBar 8 has 8 pixels. Pixel numbering runs from left to right with the fixture facing forward (display and connectors facing away from you) and Pixel Mirror set to Off. With Pixel Mirror set to Mirrored the numbering is flipped left to right.

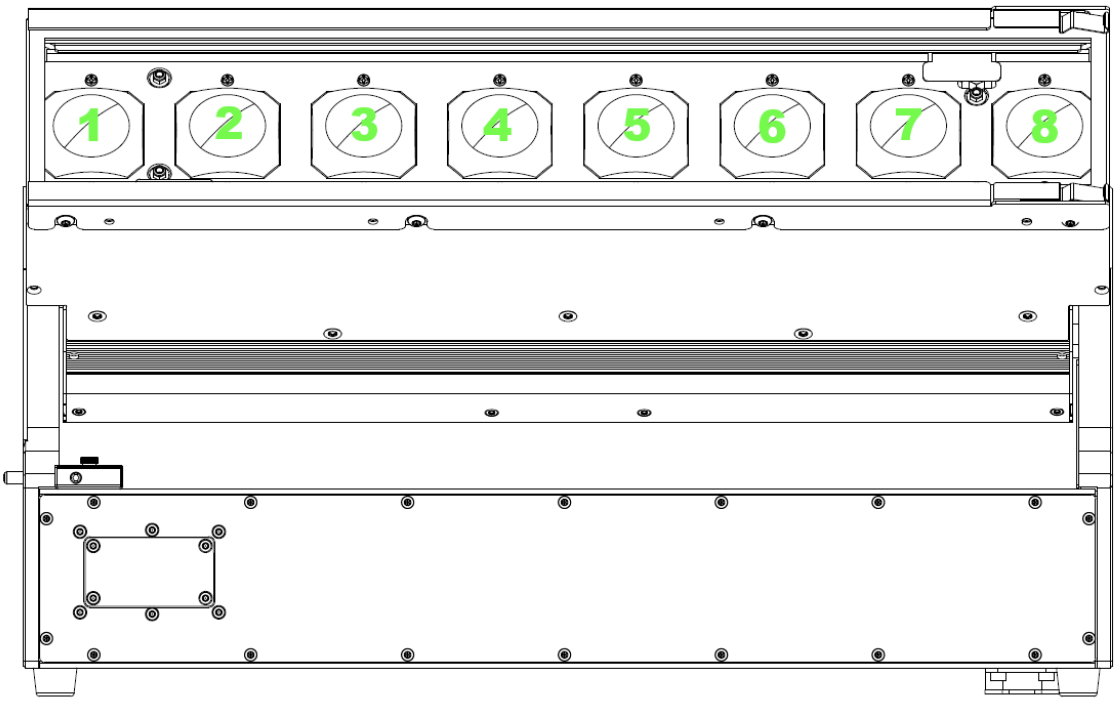


Pixel numbering 1 to 8

2. DMX control modes overview

The following DMX control modes are available in the WildBar 8. They follow the WildBar 16 layout with 8 instead of 16 pixels: channels 1 to 28 are identical in all modes; the pixel modes add 3 pixel mapper channels and the color channels of the 8 pixels (3 per pixel in M2, 4 per pixel in M3). This gives 28, 55 and 63 channels, as stated in the WildBar 8 data sheet. The channel layout is to be confirmed with the released WildBar 8 firmware (**TBC**).

Mode	Name	Channels	Description
M1	Basic	28	Overall control of all pixels as a block, with pattern engine.
M2	Pixel (default)	55	As M1 plus individual RGB control of each of the 8 pixels. In this mode the pixel engine can be patched separately from the main fixture.
M3	RGBL Pixel	63	As M1 plus individual RGBL control of each of the 8 pixels (the Lime channel of a pixel is unused in RGB color mix mode).

For channels that control individual colors the following abbreviations are used: R = Red, G = Green, B = Blue, L = Lime. RGB / RGBL refer to the Color Mix Mode setting of the fixture.

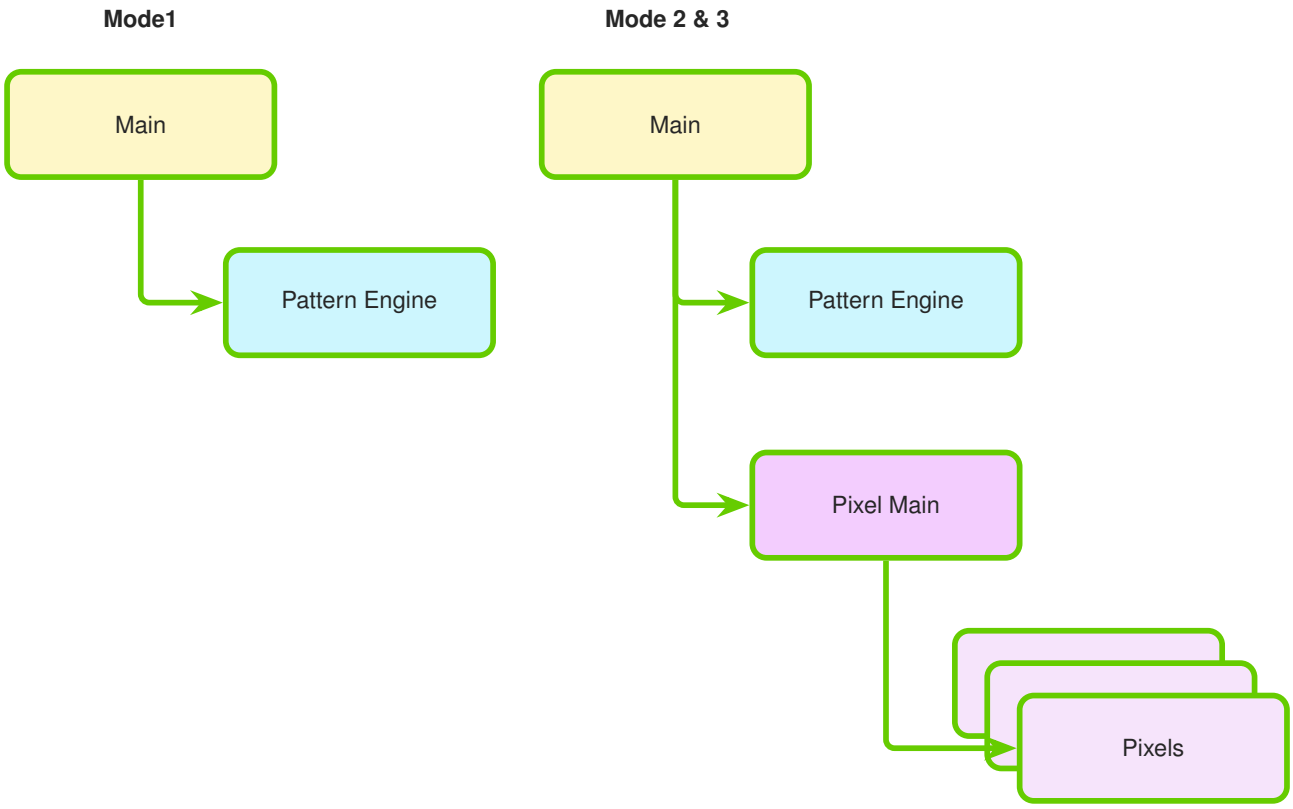

Device tree of the WildBar 8 for M2 and M3

Channel overview

Cell colors show the layer a channel belongs to:

Color	Meaning
	Main module (tilt, intensity, shutter, zoom, color, CTC, tungsten)
	Pattern engine (sub module)
	Pixel mapper intensity and shutter
	Individual pixels (1 to 8)

CH	M1 - Basic (28 CH)	M2 - Pixel (default) (55 CH)	M3 - RGBL Pixel (63 CH)
1	Tilt Coarse	Tilt Coarse	Tilt Coarse
2	Tilt Fine	Tilt Fine	Tilt Fine
3	Intensity coarse	Intensity coarse	Intensity coarse
4	Intensity fine	Intensity fine	Intensity fine
5	Shutter	Shutter	Shutter
6	Zoom	Zoom	Zoom
7	Control/Setting	Control/Setting	Control/Setting
8	Mix Prio	Mix Prio	Mix Prio
9	[1] RGB - Red coarse / [2] RGBL - Red coarse	[1] RGB - Red coarse / [2] RGBL - Red coarse	[1] RGB - Red coarse / [2] RGBL - Red coarse
10	[1] RGB - Red fine / [2] RGBL - Red fine	[1] RGB - Red fine / [2] RGBL - Red fine	[1] RGB - Red fine / [2] RGBL - Red fine
11	[1] RGB - Green coarse / [2] RGBL - Green coarse	[1] RGB - Green coarse / [2] RGBL - Green coarse	[1] RGB - Green coarse / [2] RGBL - Green coarse
12	[1] RGB - Green fine / [2] RGBL - Green fine	[1] RGB - Green fine / [2] RGBL - Green fine	[1] RGB - Green fine / [2] RGBL - Green fine
13	[1] RGB - Blue coarse / [2] RGBL - Blue coarse	[1] RGB - Blue coarse / [2] RGBL - Blue coarse	[1] RGB - Blue coarse / [2] RGBL - Blue coarse
14	[1] RGB - Blue fine / [2] RGBL - Blue fine	[1] RGB - Blue fine / [2] RGBL - Blue fine	[1] RGB - Blue fine / [2] RGBL - Blue fine
15	[1] RGB - not used / [2] RGBL - Lime coarse	[1] RGB - not used / [2] RGBL - Lime coarse	[1] RGB - not used / [2] RGBL - Lime coarse
16	[1] RGB - not used / [2] RGBL - Lime fine	[1] RGB - not used / [2] RGBL - Lime fine	[1] RGB - not used / [2] RGBL - Lime fine
17	CTC - Color Temperature Control	CTC - Color Temperature Control	CTC - Color Temperature Control
18	Tungsten Effect	Tungsten Effect	Tungsten Effect
19	Pattern Engine Intensity coarse	Pattern Engine Intensity coarse	Pattern Engine Intensity coarse
20	Pattern Engine Intensity fine	Pattern Engine Intensity fine	Pattern Engine Intensity fine
21	Pattern Shutter	Pattern Shutter	Pattern Shutter
22	Pattern Red	Pattern Red	Pattern Red
23	Pattern Green	Pattern Green	Pattern Green
24	Pattern Blue	Pattern Blue	Pattern Blue
25	Pattern Select	Pattern Select	Pattern Select
26	Pattern Speed	Pattern Speed	Pattern Speed
27	Pattern X-Fade	Pattern X-Fade	Pattern X-Fade
28	Pattern Transition	Pattern Transition	Pattern Transition
29		Pixelmapper Intensity coarse (main module)	Pixelmapper Intensity coarse (main module)
30		Pixelmapper Intensity fine (main module)	Pixelmapper Intensity fine (main module)
31		Pixelmapper shutter (main module)	Pixelmapper shutter (main module)
32		Red (Pixel 01)	Red (Pixel 01)
33		Green (Pixel 01)	Green (Pixel 01)
34		Blue (Pixel 01)	Blue (Pixel 01)

CH	M1 - Basic (28 CH)	M2 - Pixel (default) (55 CH)	M3 - RGBL Pixel (63 CH)
35		Red (Pixel 02)	Lime (Pixel 01) (unused in RGB mode)
36		Green (Pixel 02)	Red (Pixel 02)
37		Blue (Pixel 02)	Green (Pixel 02)
38		Red (Pixel 03)	Blue (Pixel 02)
39		Green (Pixel 03)	Lime (Pixel 02) (unused in RGB mode)
40		Blue (Pixel 03)	Red (Pixel 03)
41		Red (Pixel 04)	Green (Pixel 03)
42		Green (Pixel 04)	Blue (Pixel 03)
43		Blue (Pixel 04)	Lime (Pixel 03) (unused in RGB mode)
44		Red (Pixel 05)	Red (Pixel 04)
45		Green (Pixel 05)	Green (Pixel 04)
46		Blue (Pixel 05)	Blue (Pixel 04)
47		Red (Pixel 06)	Lime (Pixel 04) (unused in RGB mode)
48		Green (Pixel 06)	Red (Pixel 05)
49		Blue (Pixel 06)	Green (Pixel 05)
50		Red (Pixel 07)	Blue (Pixel 05)
51		Green (Pixel 07)	Lime (Pixel 05) (unused in RGB mode)
52		Blue (Pixel 07)	Red (Pixel 06)
53		Red (Pixel 08)	Green (Pixel 06)
54		Green (Pixel 08)	Blue (Pixel 06)
55		Blue (Pixel 08)	Lime (Pixel 06) (unused in RGB mode)
56			Red (Pixel 07)
57			Green (Pixel 07)
58			Blue (Pixel 07)
59			Lime (Pixel 07) (unused in RGB mode)
60			Red (Pixel 08)
61			Green (Pixel 08)
62			Blue (Pixel 08)
63			Lime (Pixel 08) (unused in RGB mode)

3. DMX control channel layout

In the following DMX channel layout tables, the default/home value sent by a control console is normally 0; a different value is stated at the end of the table. “(3 s hold)” means that the value must be held for 3 seconds before the command is activated; the default option setting is marked in the Note column. Slot style “snap” means the value changes instantly, “fade” means it changes smoothly across the range.

Tilt

Function	DMX from	DMX to	Slot style	Note
Tilt coarse	0	65535	fade	Increasing values will turn head to front.
Tilt fine				

Intensity

Function	DMX from	DMX to	Slot style	Note
Intensity coarse / fine	0	65535	fade	Intensity 0..100%

Shutter

Function	DMX from	DMX to	Slot style	Note
Closed	0	4	snap	blackout
Single Flash	5	9	fade	One Single Flash if Value Change within this range (005..009)
Pulse (slow-fast)	10	39	fade	Synchronized Pulse (Ramp-Up/Down) Effect / Speed adjustable from slow to fast within this range (010..039)
Pulse Open (slow- fast)	40	69	fade	Synchronized Pulse Open (Ramp-Up) Effect / Speed adjustable from slow to fast within this range (040..069)
Pulse Close (slow- fast)	70	99	fade	Synchronized Pulse Close (Ramp-Up) Effect / Speed adjustable from slow to fast within this range (070..099)
Double-Flash (slow > fast)	100	129	fade	Synchronized Double Flash slow to fast (same as KNV) / Speed adjustable from slow to fast within this range (100..129)
Strobe Rnd Pixel (slow-fast)	130	159	fade	Random Strobe on Random Pixels slow to fast / Speed adjustable from slow to fast within this range (130..159)

Function	DMX from	DMX to	Slot style	Note
Strobe Rnd all (slow-fast)	160	199	fade	Random Strobe on all Pixels slow to fast / Speed adjustable from slow to fast within this range (160..199)
Strobe Sync all Pixel (slow-fast)	200	250	fade	Synchronized Strobe slow 1Hz to fast / Speed adjustable from slow to fast within this range (200..250)
Open	251	255	snap	Continuously on

Default/Home value: 255

Zoom

Function	DMX from	DMX to	Slot style	Note
Beam Angle	0	255	fade	narrow [000] . . . wide [255]

Control/Setting

(3s hold) indicates that the value must be held for 3 seconds before the command will be activated.

The Default option setting for the fixture is indicated with bold type.

Function	DMX from	DMX to	Slot style	Note
Idle	0	9	snap	
No function	10	11		
iQ.Service Connect	12	13	snap	Will enable the connectivity to the GLP iQ.Service App for 5 minutes.
No function	14	19		
Dimmer Curve: Soft (Square)	20	21	snap	(3s hold) (DEFAULT)
Dimmer Curve: Linear	22	23	snap	(3s hold)
Dimmer Curve: S- Curve	24	25	snap	(3s hold)
No function	26	29		
Display Mode: OFF	30	31	snap	(3s hold)
Display Mode: Auto	32	33	snap	(3s hold) (DEFAULT)
Display Mode : ON	34	35	snap	(3s hold)
No function	36	39		
Display Orientation: Normal	40	41	snap	(3s hold) (DEFAULT)
Display Orientation: Upside-Down	42	43	snap	(3s hold)
No function	44	45		
No Signal: Blackout	46	47	snap	(3s hold) If DMX Fails, fixture will blackout
No Signal: Hold	48	49	snap	(3s hold) (DEFAULT) If DMX Fails, fixture will hold last DMX Value

Function	DMX from	DMX to	Slot style	Note
No Signal: Replay Captured Scene	50	51	snap	(3s hold) If DMX Fails, fixture will run captured DMX Scene
Capture Scene	52	53	snap	(3s hold) Capture current DMX Scene for Stand-Alone
No function	54	55		
Fan Mode : Off	56	57	snap	(Limited Output) (3s hold) All Fans off - only necessary fans on low speed.
Fan Mode: Regulated	58	59	snap	(3s hold) (DEFAULT)
Fan Mode: High	60	61	snap	(3s hold)
Fan Mode : Medium	62	63	snap	(Limited Output) (3s hold)
Fan Mode: Low	64	65	snap	(Limited Output) (3s hold)
No function	66	69		
Pixel Mirror: Off	70	71	snap	(3s hold) (DEFAULT)
Pixel Mirror: x- mirror	72	73	snap	(3s hold)
No function	74	137		
White Point 8000K	138	139	snap	RGB-Mode Only (3s hold)
White Point 6500K	140	141	snap	RGB-Mode Only (3s hold) (Default)
White Point 5600K	142	143	snap	RGB-Mode Only (3s hold)

Function	DMX from	DMX to	Slot style	Note
White Point 4200K	144	145	snap	RGB-Mode Only (3s hold)
White Point 3200K	146	147	snap	RGB-Mode Only (3s hold)
No function	148	149		
Sub Fixture Mode: Normal	150	151	snap	(3s hold) (DEFAULT)
Sub Fixture Mode: Independent	152	153	snap	(3s hold)
No function	154	165		
Color Mode: RGB [1]	166	167	snap	(3s hold) (DEFAULT)
Color Mode: RGBL [2]	168	169	snap	(3s hold)
No function	170	181		
iQ.Gamut: FULL	182	183		(3s hold) (DEFAULT)
iQ.Gamut: Rec.2020	184	185		(3s hold)
iQ.Gamut: REC.709	186	187		(3s hold)
No function	188	189		
Hibernation: OFF	190	191	snap	(3s hold) (DEFAULT) Fixture will perform a Reset
Hibernation: ON	192	193	snap	(3s hold)
No function	194	215		
PWM Optimal (O)	216	217	snap	(Default) (3s hold)
PWM High1 (H1)	218	219	snap	(3s hold)
PWM High2 (H2)	220	221	snap	(3s hold)
PWM Max (M)	222	223	snap	(3s hold)
No function	224	229		
Save as User Setting Preset 1	230	231	snap	(3s hold)

Function	DMX from	DMX to	Slot style	Note
Save as User Setting Preset 2	232	233	snap	(3s hold)
Save as User Setting Preset 3	234	235	snap	(3s hold)
No function	236	237		
Load User Setting Preset 1	238	239	snap	(3s hold)
Load User Setting Preset 2	240	241	snap	(3s hold)
Load User Setting Preset 3	242	243	snap	(3s hold)
Load Settings Default	244	245	snap	(3s hold)
No function	246	249		
Reset Tilt	250	251	snap	(3s Hold) - Will trigger only one time. To trigger an additional time this value slot need to be left first for 3s.
Reset HEAD	252	253	snap	(3s Hold) - Will trigger only one time. To trigger an additional time this value slot need to be left first for 3s.
Reset ALL	254	255	snap	(3s Hold) - Will trigger only one time. To trigger an additional time this value slot need to be left first for 3s.

CTC (Color Temperature Control)

Function	DMX from	DMX to	Slot style	Note
Open	0	9	Snap	Selected White Point
10000K	10	11	fade	Fade through Color temperatures of 1000K to 2500K step less (interpolation)
9999..2501K	12	254		
2500K	255	255		

Tungsten (Tungsten simulation channel)

Function	DMX from	DMX to	Slot style	Note
Off	0	9	Snap	Selected White Point / No Red Shift or Delay while dimming
Tungsten ACL 250W/28V	10	19	Snap	Uses the color temperature of the selected reference light source and dims it with the time delay and red shift behavior of it . Tungsten simulation has higher priority than colormix, CTC and color wheel.
Tungsten Blinder 650W/120V	20	29	Snap	
Tungsten 750W/80V	30	39	Snap	
Tungsten 1000W/240V	40	49	Snap	
Tungsten 1200W/240V	50	59	Snap	

Function	DMX from	DMX to	Slot style	Note
Tungsten 2000W/230V	60	69	Snap	
Tungsten 2500W/230V	70	79	Snap	
Tungsten 5000W/230V	80	89	Snap	
Not used (= Off)	90	120		–
Off	120	139	Snap	Selected White Point / No Red Shift or Delay while dimming
FX Tungsten ACL 250W/28V	140	149	Snap	Uses currently set color temperature and dims it with the time delay and red shift behavior of the selected reference light source. If color wheel or CTO is enabled, the effect will combine it.
FX Tungsten Blinder 650W/120V	150	159	Snap	
FX Tungsten 750W/80V	160	169	Snap	
FX Tungsten 1000W/240V	170	179	Snap	
FX Tungsten 1200W/240V	180	189	Snap	
FX Tungsten 2000W/230V	190	199	Snap	
FX Tungsten 2500W/230V	200	209	Snap	
FX Tungsten 5000W/230V	210	219	Snap	
Not used (= Off)	220	255		

Main Color Control

The function of these channels depends on the Color Mix Mode of the fixture (RGB or RGBL).

Colormix of subfixtures are always in RGB mode

Function	DMX from	DMX to	Slot style
RGB: - Red coarse	0	65535	fade
RGBL: - Red coarse			
RGB: - Red fine			
RGBL: - Red fine			
RGB: - Green coarse	0	65535	fade
RGBL: - Green coarse			
RGB: - Green fine			
RGBL: - Green fine			
RGB: - Blue coarse	0	65535	fade
RGBL: - Blue coarse			
RGB: - Blue fine			
RGBL: - Blue fine			
RGB: - not used	0	65535	fade
RGBL: - Lime coarse			
RGB: - not used			
RGBL: - Lime fine			

Pattern / Pixel Color Control

Function	DMX from	DMX to	Slot style	Note
RGB: - Red	0	255	fade	0% .. 100%
RGB: - Green	0	255	fade	0% .. 100%
RGB: - Blue	0	255	fade	0% .. 100%

Mix Priority

Function	DMX from	DMX to	Slot style	Note
Main Module & Pattern & Pixel Engine (HTP)	0	9	snap	the highest value of main- or pattern or pixel engine defines the resulting value.
Main Module Only	10	19	snap	The value of the pattern and pixel fixture will be ignored. The resulting value is the values of the main value.
Pattern Module Only	20	29	snap	The value of the main and pixel engine will be ignored. The resulting value is the values of the Pattern value.
Pixel Module Only	30	39	snap	The value of the main and pattern will be ignored. The resulting value is the values of the Pattern value.
Main & Pattern HTP + Pixel Module Module additive	40	49	snap	The main value and pattern will function as HTP The value of the pixel engine will be added to this. The resulting value is the sum of both values.
Main & Pattern HTP - Pixel Module subtractive	50	59	snap	The main value and pattern will function as HTP The value of the pixel engine will be subtracted from this.
Pixel Module - (Main & Pattern HTP) subtractive	60	69	snap	The main value and pattern will function as HTP This value will be subtracted from the value of the pixel engine value.
Main Module over Pixel Module Snap	70	79	snap	Output from the Pixel Engine Module stays in the background. Output from the Main fixture Module has higher priority and will not mix with the Pixel Engine color. As soon the output value of the main module is >0 the Pixel Engine will black out and the Main value will appear. Pattern Engine will HTP into the result
Pixel Module over Main & Pattern Module Snap	80	89	snap	Output from the Main & Pattern (HTP) fixture Module stays in the background. Output from the Pixel Modules has higher priority and will not mix with the main value. As soon the output value of the Pixel module is >0 the main & pattern value will black out and the pixel engine will appear.

Function	DMX from	DMX to	Slot style	Note
Main & Pattern over Pixel Cross-fade	90	99	snap	Output value from the Pixel fixture Modules stays in the background and the Output value from the Main & Pattern (HTP) module has higher priority. If you fade in a Main & Pattern (HTP) value, the Pixel value will crossfade to the Main value.
Pixel Module over Pixel Module Crossfade	100	109	snap	Output value from the Main & Pattern Module stays in the background and the Output value from the Pixel Modules has higher priority. If you fade in a Main value, the Pixel value will cross-fade to the Main & Pattern value.
Not Used	110	127		Not used = Main & Sub (HTP)

Function	DMX from	DMX to	Slot style	Note
				DMX
Main & Pattern (HTP) Module only	128	130	snap	
Main Module & Pattern & Pixel Module (HTP)	191	192	snap	(default value)
Pixel Module only	253	255	snap	

Pattern Select

Pattern select	Editor	DMX from	DMX to	Slot style	Notes
Idle	1	0	9	snap	All Pixel
Static Pattern 01	2	10	11	snap	
Static Pattern 02	3	12	13	snap	
Static Pattern 03	4	14	15	snap	
Static Pattern 04	5	16	17	snap	
Static Pattern 05	6	18	19	snap	
Static Pattern 06	7	20	21	snap	
Static Pattern 07	8	22	23	snap	
Static Pattern 08	9	24	25	snap	
Static Pattern 09	10	26	27	snap	
Static Pattern 10	11	28	29	snap	
Static Pattern 11	12	30	31	snap	
Static Pattern 12	13	32	33	snap	
Static Pattern 13	14	34	35	snap	
Static Pattern 14	15	36	37	snap	
Static Pattern 15	16	38	39	snap	
Static Pattern 16	17	40	41	snap	
Static Pattern 17	18	42	43	snap	
Static Pattern 18	19	44	45	snap	
Static Pattern 19	20	46	47	snap	
Static Pattern 20	21	48	49	snap	
Static Pattern 21	22	50	51	snap	

Pattern select	Editor	DMX from	DMX to	Slot style	Notes
Static Pattern 22	23	52	53	snap	
Static Pattern 23	24	54	55	snap	
Static Pattern 24	25	56	57	snap	
Static Pattern 25	26	58	59	snap	
Static Pattern 26	27	60	61	snap	
Static Pattern 27	28	62	63	snap	
Static Pattern 28	29	64	65	snap	
Static Pattern 29	30	66	67	snap	
Static Pattern 30	31	68	69	snap	
Static Pattern 31	32	70	71	snap	
Static Pattern 32	33	72	73	snap	
Static Pattern 33	34	74	75	snap	

Pattern select	Editor	DMX from	DMX to	Slot style	Notes
Static Pattern 34	35	76	77	snap	
Static Pattern 35	36	78	79	snap	
Static Pattern 36	37	80	81	snap	
Static Pattern 37	38	82	83	snap	
Static Pattern 38	39	84	85	snap	
Static Pattern 39	40	86	87	snap	
Static Pattern 40	41	88	89	snap	
Static Pattern 41	42	90	91	snap	
Static Pattern 42	43	92	93	snap	
Static Pattern 43	44	94	95	snap	
Static Pattern 44	45	96	97	snap	
Static Pattern 45	46	98	99	snap	
Static Pattern 46	47	100	101	snap	
Static Pattern 47	48	102	103	snap	
Static Pattern 48	49	104	105	snap	
Static Pattern 49	50	106	107	snap	
Static Pattern 50	51	108	109	snap	
Static Pattern 51	52	110	111	snap	
Static Pattern 52	53	112	113	snap	
Static Pattern 53	54	114	115	snap	
Static Pattern 54	55	116	117	snap	
Static Pattern 55	56	118	119	snap	
Static Pattern 56	57	120	121	snap	
Static Pattern 57	58	122	123	snap	
Static Pattern 58	59	124	125	snap	
Static Pattern 59	60	126	127	snap	
Dynamic Pattern 01	61	128	129	snap	
Dynamic Pattern 02	62	130	131	snap	
Dynamic Pattern 03	63	132	133	snap	
Dynamic Pattern 04	64	134	135	snap	
Dynamic Pattern 05	65	136	137	snap	
Dynamic Pattern 06	66	138	139	snap	
Dynamic Pattern 07	67	140	141	snap	
Dynamic Pattern 08	68	142	143	snap	
Dynamic Pattern 09	69	144	145	snap	

Pattern select	Editor	DMX from	DMX to	Slot style	Notes
Dynamic Pattern 10	70	146	147	snap	
Dynamic Pattern 11	71	148	149	snap	
Dynamic Pattern 12	72	150	151	snap	
Dynamic Pattern 13	73	152	153	snap	
Dynamic Pattern 14	74	154	155	snap	
Dynamic Pattern 15	75	156	157	snap	
Dynamic Pattern 16	76	158	159	snap	
Dynamic Pattern 17	77	160	161	snap	
Dynamic Pattern 18	78	162	163	snap	
Dynamic Pattern 19	79	164	165	snap	
Dynamic Pattern 20	80	166	167	snap	
Dynamic Pattern 21	81	168	169	snap	
Dynamic Pattern 22	82	170	171	snap	
Dynamic Pattern 23	83	172	173	snap	
Dynamic Pattern 24	84	174	175	snap	
Dynamic Pattern 25	85	176	177	snap	
Dynamic Pattern 26	86	178	179	snap	
Dynamic Pattern 27	87	180	181	snap	
Dynamic Pattern 28	88	182	183	snap	
Dynamic Pattern 29	89	184	185	snap	

Pattern select	Editor	DMX from	DMX to	Slot style	Notes
Dynamic Pattern 30	90	186	187	snap	
Dynamic Pattern 31	91	188	189	snap	
Dynamic Pattern 32	92	190	191	snap	
Dynamic Pattern 33	93	192	193	snap	
Dynamic Pattern 34	94	194	195	snap	
Dynamic Pattern 35	95	196	197	snap	
Dynamic Pattern 36	96	198	199	snap	
Dynamic Pattern 37	97	200	201	snap	
Dynamic Pattern 38	98	202	203	snap	
Dynamic Pattern 39	99	204	205	snap	
Dynamic Pattern 40	100	206	207	snap	Beam Shaper
Dynamic Pattern 41	101	208	209	snap	Beam Shaper
Dynamic Pattern 42	102	210	211	snap	Beam Shaper
Dynamic Pattern 43	103	212	213	snap	Beam Shaper
Dynamic Pattern 44	104	214	215	snap	Beam Shaper
Dynamic Pattern 45	105	216	217	snap	Beam Shaper
Dynamic Pattern 46	106	218	219	snap	Beam Shaper
Dynamic Pattern 47	107	220	221	snap	Beam Shaper
Dynamic Pattern 48	108	222	223	snap	Beam Shaper
Dynamic Pattern 49	109	224	225	snap	Beam Shaper
Dynamic Pattern 50	110	226	227	snap	Beam Shaper
Special Pattern 01		228	229	snap	X Net pattern
Special Pattern 02		230	231	snap	X Net pattern
Special Pattern 03		232	233	snap	X Net pattern
Special Pattern 04		234	235	snap	X Net pattern
Special Pattern 05		236	237	snap	X Net pattern
Special Pattern 06		238	239	snap	X Net pattern

Pattern select	Editor	DMX from	DMX to	Slot style	Notes
Special Pattern 07		240	241	snap	X Net pattern
Special Pattern 08		242	243	snap	X Net pattern
Special Pattern 09		244	245	snap	X Net pattern
Special Pattern 10		246	247	snap	X Net pattern
Special Pattern 11		248	249	snap	X Net pattern
Random Pixel		250	255	snap	X Random Pixel Pattern

Pattern Step/Speed

Function	DMX from	DMX to	Slot style	Note
				Continuous movement (loop)
Stop (First Pattern Step)	0	2	snap	
CW fast - slow (run Pattern Step 1..n)	3	63	fade	
Stop at current position	64	66	snap	
CCW slow - fast (run Pattern Step n..1)	67	127	fade	Select specific pattern step
Pattern Step 01	128	129	snap	
Pattern Step 02	130	131	snap	
Pattern Step 03	132	133	snap	
Pattern Step 04	134	135	snap	
Pattern Step 05	136	137	snap	
Pattern Step 06	138	139	snap	
Pattern Step 07	140	141	snap	
Pattern Step 08	142	143	snap	
Pattern Step 09	144	145	snap	
Pattern Step 10	146	147	snap	
Pattern Step 11	148	149	snap	
Pattern Step 12	150	151	snap	
Pattern Step 13	152	153	snap	
Pattern Step 14	154	155	snap	
Pattern Step 15	156	157	snap	
Pattern Step 16	158	159	snap	
Pattern Step 17	160	161	snap	
Pattern Step 18	162	163	snap	
Pattern Step 19	164	165	snap	
Pattern Step 20	166	167	snap	
Pattern Step 21	168	169	snap	
Pattern Step 22	170	171	snap	
Pattern Step 23	172	173	snap	
Pattern Step 24	174	175	snap	
Pattern Step 25	176	177	snap	

Function	DMX from	DMX to	Slot style	Note
Pattern Step 26	178	179	snap	
Pattern Step 27	180	181	snap	
Pattern Step 28	182	183	snap	
Pattern Step 29	184	185	snap	
Pattern Step 30	186	187	snap	
Pattern Step 31	188	189	snap	
Pattern Step 32	190	191	snap	
Pattern Step 33	192	193	snap	
Pattern Step 34	194	195	snap	
Pattern Step 35	196	197	snap	
Pattern Step 36	198	199	snap	
Pattern Step 37	200	201	snap	
Pattern Step 38	202	203	snap	
Pattern Step 39	204	205	snap	
Pattern Step 40	206	207	snap	
Pattern Step 41	208	209	snap	
Pattern Step 42	210	211	snap	
Pattern Step 43	212	213	snap	
Pattern Step 44	214	215	snap	
Pattern Step 45	216	217	snap	

Function	DMX from	DMX to	Slot style	Note
Pattern Step 46	218	219	snap	
Pattern Step 47	220	221	snap	
Pattern Step 48	222	223	snap	
Pattern Step 49	224	225	snap	
Pattern Step 50	226	227	snap	
Pattern Step 51	228	229	snap	
Pattern Step 52	230	231	snap	
Pattern Step 53	232	233	snap	
Pattern Step 54	234	235	snap	
Pattern Step 55	236	237	snap	
Pattern Step 56	238	239	snap	
Pattern Step 57	240	241	snap	
Pattern Step 58	242	243	snap	
Pattern Step 59	244	245	snap	
Pattern Step 60	246	247	snap	Individual stepping control
Next Step A	248	249	snap	
Next Step B	250	251	snap	
Previous Step A	252	253	snap	
Previous Step B	254	255	snap	

Pattern X-fade

Sets crossfade in between steps of a pattern

DMX range fade

Pattern Step Crossfade

Function	DMX from	DMX to	Slot style
Off (no Crossfade = Snap)	0	9	snap
XFade - Snap .. min. XFade .. max. XFade (Fade in and fade out time is identical)	10	127	fade
Off (no Crossfade = Snap)	128	137	snap
XFade with Tail - Snap .. min. XFade with Tail .. max. XFade with Tail (Fade-In time is shorter than Fade out time - this creates a shadow effect)	138	255	fade

Pattern Transition

Sets fade in between patterns when new pattern selected

Pattern Transition DMX range fade Notes

Function	DMX from	DMX to	Slot style	Note
Off (Snap between different Patterns)	0	9	snap	Pattern A to Pattern B will snap
Normal Transition (snap .. fade 5s)	10	63	fade	Pattern A to Pattern B will crossfade 0- 5s
Off (Snap between different Patterns)	64	73	snap	Pattern A to Pattern B will snap
FOB Transition / Fade over Blackout (snap .. fade 5s)	74	127	fade	Pattern A to Pattern B will crossfade over Blackout 0-5s
Off (Snap between different Patterns)	128	137	snap	Pattern A to Pattern B will snap
FOF Transition / Fade over Full (snap .. fade 5s)	138	191	fade	Pattern A to Pattern B will crossfade over Full 0-5s
Off - reserved for additional feature	192	201		
No Transition Time - reserved for additional feature	202	255		